




SENSOR REPLACEMENT GUIDE



Mouldflo A/S
Copyright © 2016

How to replace sensor

1. Find your new sensor. Make sure that the 2 o-rings are both in place (1 green and 1 black).

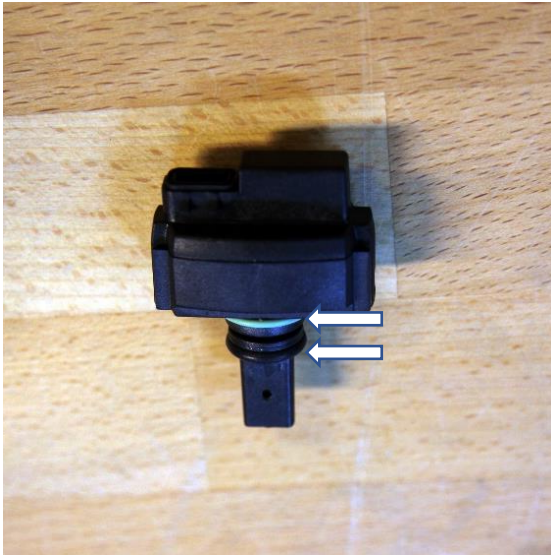



2. To remove sensor from manifold, use a screwdriver to loosen the metal clip. Save metal clip (you will need it for the new sensor).

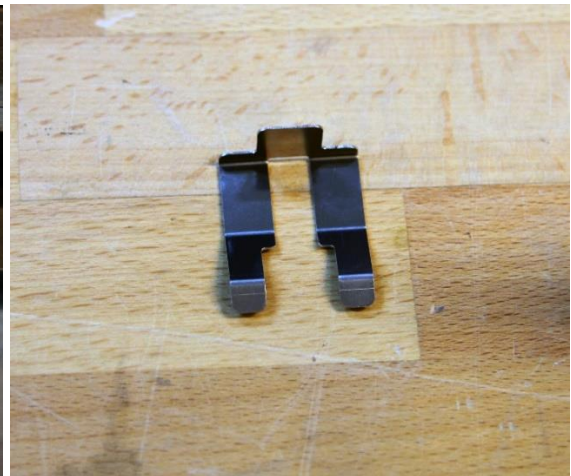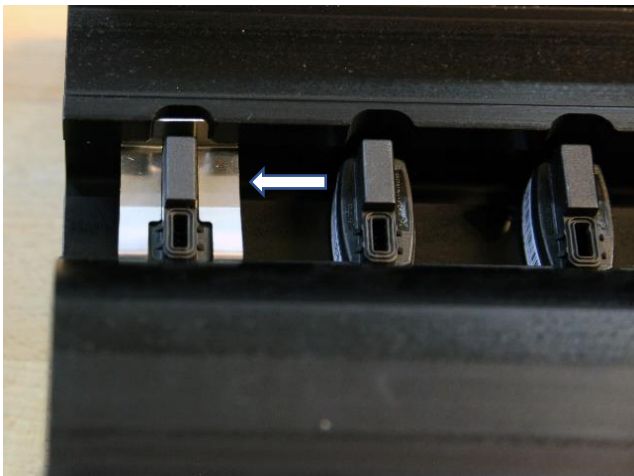



3. Apply a little soapy water to the o-rings on the new sensor (this helps both the seal and the placement of the sensor).




4. Place the new sensor in the manifold.

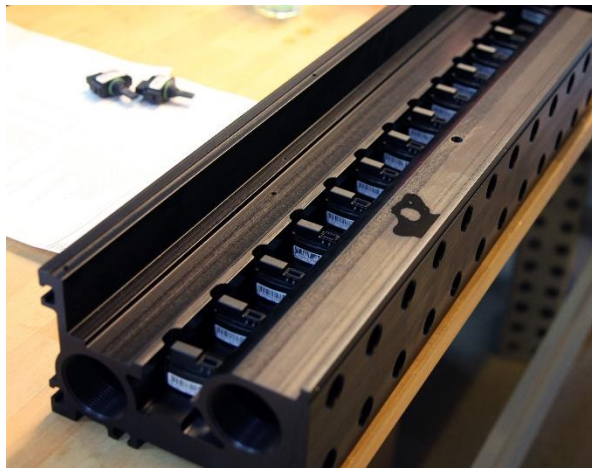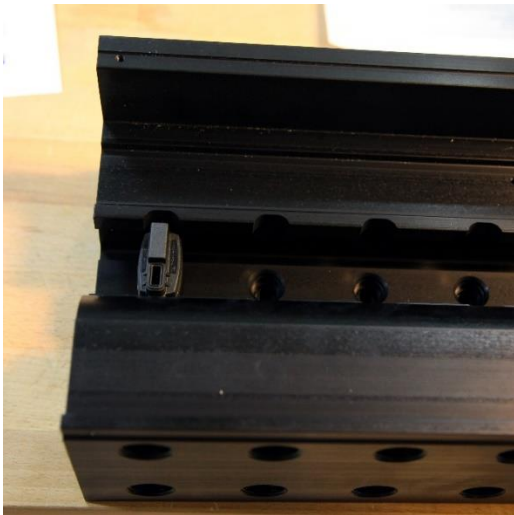

5. Place the metal clip on the sensor. Use both fingers to press down the metal clip as shown in the picture below.

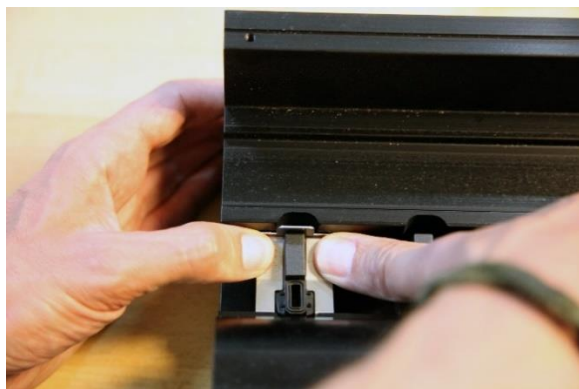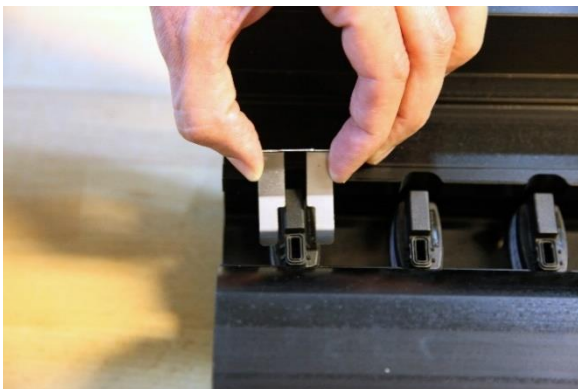

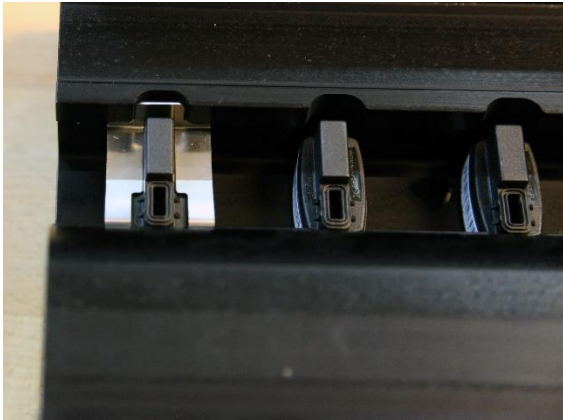

6. Install the black cables. Remember to place them in the sensor plug vertically. Tilt to the right and then to the left until it *clicks*.

